


FRONT WHEEL, BRACKET AND HARDWARE
LB5 LB8

45 5, 6, 7 HP
18 8, 10 HP

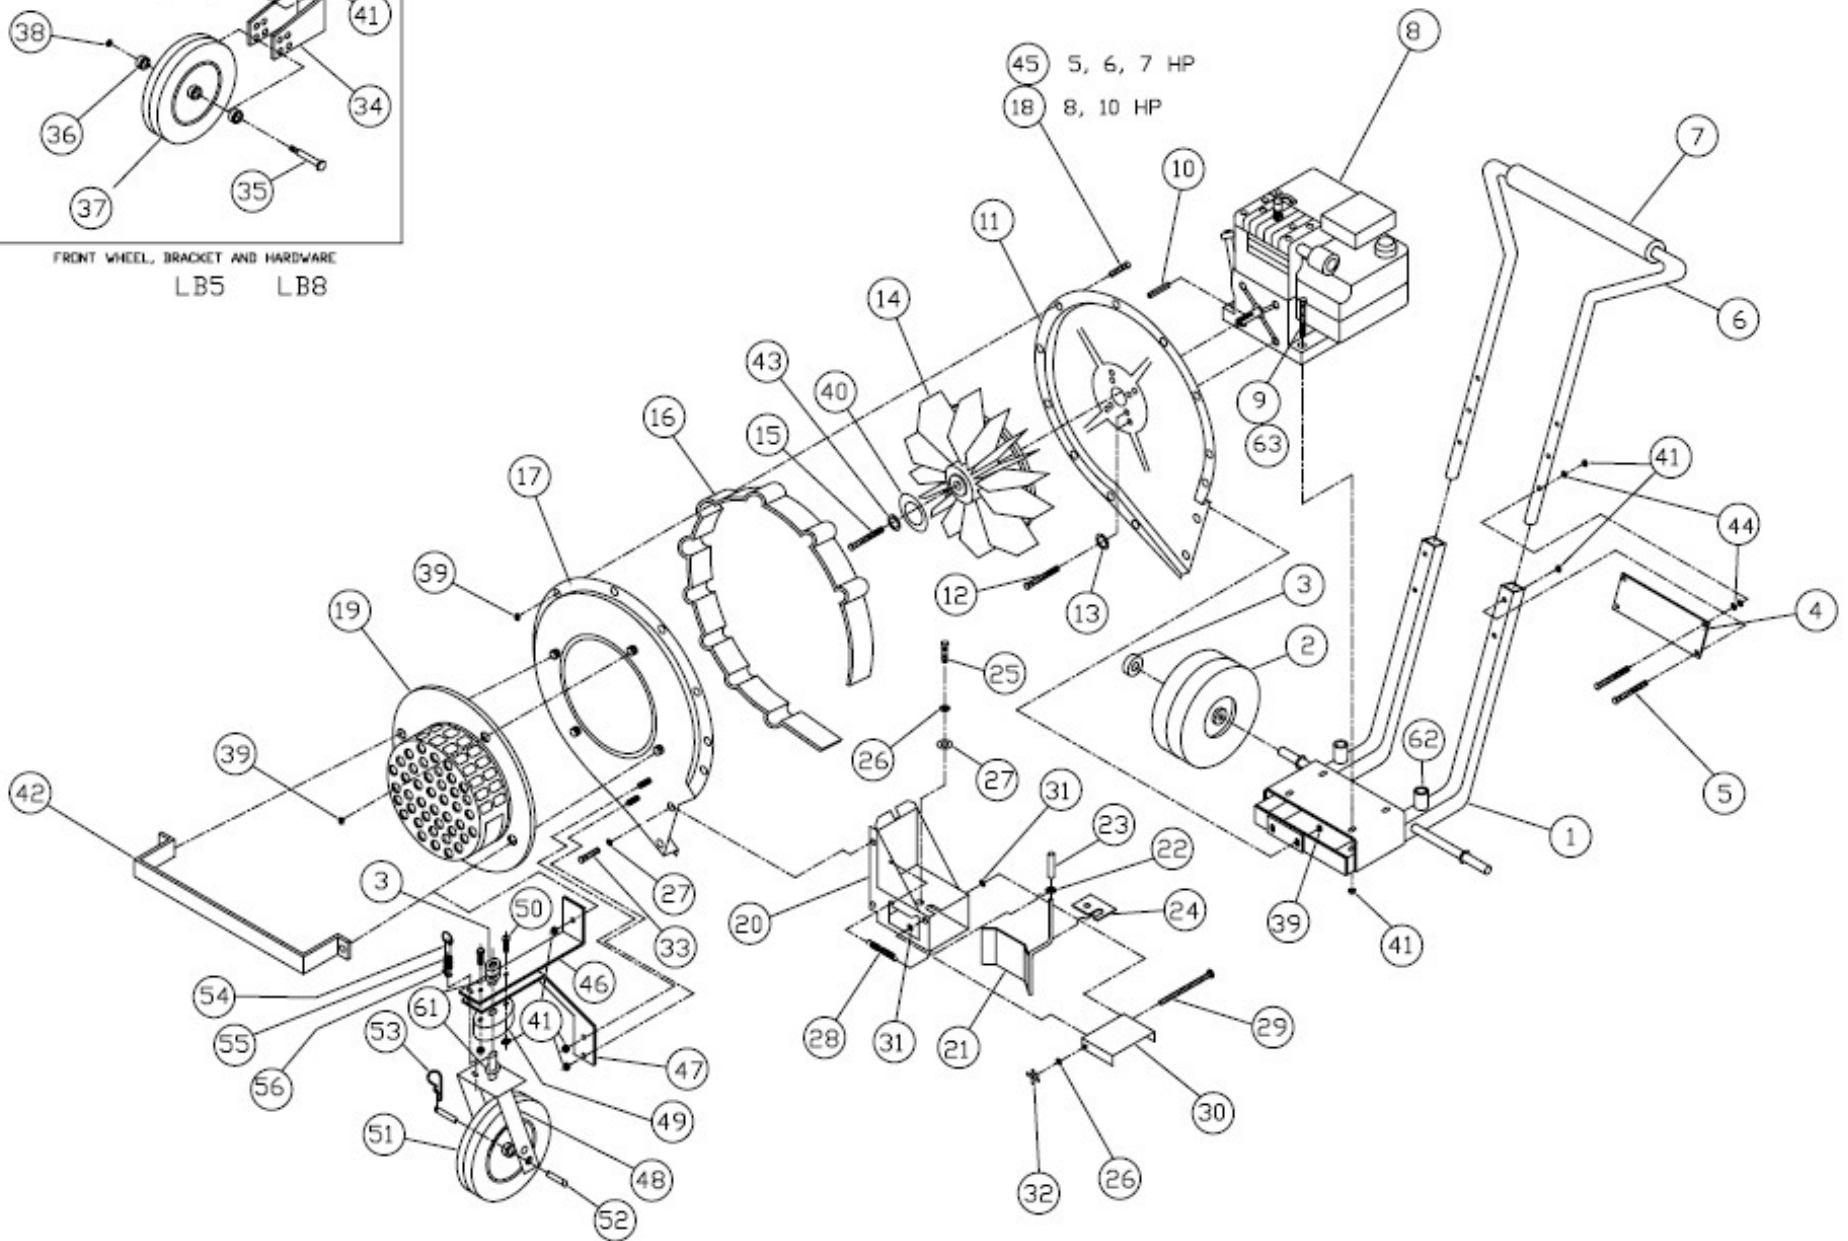

LEAF BLOWER PARTS LIST

ITEM NO.	PART NO.	QTY.	DESCRIPTION
1	705-0196	1	LOWER FRAME WELDMENT
2	030-0240	2	4.10/3.50 – 6 PNEUMATIC WHEEL – EZ MODELS
2	030-0641	2	4.10/3.50 – 4 PNEUMATIC WHEEL – LB800, LB1100, LB800EX, LB1100EX
3	090-0536	2	SHAFT COLLAR
3a	090-0457	1	PUSH CAP – EZ MODELS
3a	500-0010	1	SPACER – EZ MODELS
4	705-0132	1	METAL HANDLE BAR BRACE
4	705-0192	1	MIGHTY MAC HANDLE BAR BRACE
5	090-0072	4	5/16-18 X 2" HHCS
6	705-0034	1	UPPER HANDLEBAR ASSEMBLY
7	705-0002	1	HANDLEBAR GRIP
8		1	ENGINE – SEE PART # AT END OF THIS LIST
9	090-0090	4	5/16-18 X 1 1/2" HHCS – 800 SERIES MODELS
10	703-0424	1	1/4 X 1/4 X 2 KEY
11	705-0095	1	ENGINE HOUSING WELDMENT
12	090-0408	4	5/16-24 X 3/4" HHCS
13	090-0394	4	5/16 SPLIT LOCKWASHER
14	705-0180	1	IMPELLER
14	705-0201	1	IMPELLER – ALL LB1450'S
15	090-0021	1	3/8-24 X 1 1/4" HHCS
16	705-0097	1	HOUSING SPACER – 1100 & 1450 SERIES MODELS
17	705-0187	1	FRONT HOUSING WELDMENT
18	090-0090	11	5/16-18 X 1 1/2" HHCS – 1100 & 1450 SERIES MODELS
19	703-0021-A	1	IMPELLER HOUSING COVER
20	705-0100	1	CHUTE WELDMENT - LB800
20	705-0104	1	CHUTE WELDMENT – 1100 & 1450 SERIES MODELS
21	705-0108	1	DIVERTER WELDMENT ASSEMBLY – LB800
21	705-0110	1	DIVERTER WELDMENT ASSEMBLY – 1100 & 1450 MODELS
22	090-0225	1	3/8" INTERNAL TOOTH LOCKWASHER
23	701-0185	1	DIVERTER HANDLE GRIP
24	705-0113	1	DIVERTER CLIP
25	090-0052	1	1/4-20 X 1/2" HHCS
26	090-0378	2	1/4 SPLIT LOCKWASHER
27	090-0232	5	1/4 USS FLATWASHER
28	703-0425	1	DIVERTER EXTENSION SPRING
29	090-0480	1	1/4-20 X 5" CARRIAGE BOLT – LB800
29	090-0481	1	1/4-20 X 6" CARRIAGE BOLT – 1100 & 1450 SERIES MODELS
30	705-0098	1	DEFLECTOR – LB800
30	705-0099	1	DEFLECTOR – 1100 & 1450 SERIES MODELS
31	090-0223	2	1/4" INTERNAL TOOTH LOCKWASHER
32	705-0049	1	ADJUSTMENT KNOB – 1/4-20 THREAD
33	090-0503	4	5/16-18 X 5/8" SELF TAPPING HHCS
34	704-0177	1	FRONT WHEEL BRACKET – LB800, LB1100
35	705-0056-2	1	1/2" SHOULDER BOLT
36	500-0010	2	WHEEL SPACER
37	703-0025	1	FRONT WHEEL – LB800, LB1100
38	090-0461	1	3/8-16 NYLOCK NUT
39	090-0418	20	5/16-18 WHIZ NUT
40	090-0540	1	2" FLATWASHER
41	090-0460	12	5/16-18 NYLOCK NUT
42	705-0150	1	LIFT HANDLE – EZMC & EZM MODELS
43	090-0228	1	3/8 SPLIT LOCKWASHER
44	090-0233	6	5/16 USS FLATWASHER
45	090-0067	11	5/16-18 X 5/8" HHCS

46	705-0159	1	WHEEL SUPPORT – TOP BRACKET - EZ MODELS
47	705-0160	1	WHEEL SUPPORT – BOTTOM BRACKET - EZ MODELS
48	705-0161	1	WHEEL BRACKET WELDMENT - EZ MODELS
49	030-0264	1	PIVOT WHEEL BEARING - EZ MODELS
50	090-0088	2	5/16-18 X 1" HHCS - EZ MODELS
51	030-0263	1	2.80/2.50-4 WHEEL - EZ MODELS
52	090-0613	1	1/2 X 4" CLEVIS PIN - EZ MODELS
53	100-0015	1	3/32 HAIR SPRING - EZ MODELS
54	705-0166	1	WHEEL LOCK PIN - EZ MODELS
55	709-3409	1	SPRING - EZ MODELS
56	090-0454	1	ROLL PIN - EZ MODELS
61	090-0615	2	WASHER - EZ MODELS
62	705-0165	2	ENGINE SPACERS – 1450 SERIES MODELS
63	090-0077	4	5/16-18 x 4" HHCS – 1450 SERIES MODELS
64	090-0066	2	5/16-18 X 3/4" HHCS
--	090-0702	1	5/16-18 X 4-1/2 HHCS - EX MODEL ONLY
NOT SHOWN	705-0197	1	IMPELLER SPACER – ALL LB1450'S
NOT SHOWN	705-0198	1	ENGINE TO HOUSING SPACER – ALL LB1450'S, ALL LB800'S
NOT SHOWN	705-0199	1	BUMPER TO HOUSING SPACER – ALL LB1450'S, ALL LB800'S

ENGINES

MODEL	ENGINE #
LB800	030-0677
LB800EZ	030-0677
LB1100	030-0507
LB1100EZ	030-0507
LB1450ICEZ	030-0652
LB1450ICEZMC	030-0652
LB1100EZM	030-0507
LB1100EZEX	030-0507
LB1450ICEZM	030-0652
LB800EX	030-0677
LB1100EX	030-0507

MACKISSIC, INC.

**CALL OR EMAIL FOR INFORMATION
ON ANY OF OUR QUALITY BUILT PRODUCT LINES
www.mackissic.com**

- | | |
|---|--|
| <input type="checkbox"/> LEAF BLOWERS
<input type="checkbox"/> LEAF CYCLERS
<input type="checkbox"/> CHIPPER-SHREDDERS
<input type="checkbox"/> SPRAYERS | <input type="checkbox"/> STUMP CUTTERS
<input type="checkbox"/> TILLERS
<input type="checkbox"/> VACUUM-CHIPPERS |
|---|--|

**P.O. BOX 111, PARKER FORD, PA 19457
PHONE : 610-495-7181 FAX : 610-495-5951**